



DESIGNER PLANTS®
ULTRA REALISTIC LIVING WALLS



HOW TO INSTALL FAUX GREEN WALLS



SITE SURVEY & PREPARATION

IT IS NECESSARY TO ENSURE THAT YOU TAKE PREVENTIVE MEASURES FOR SAFE INSTALLATION

01

Measure your space (multiply length x width to calculate square feet required) and order enough panels to cover the wall or fence you seek to beautify.



02

Mark up the area you wish to start and finish on the wall or fence.

03

Ensure that the area you are installing the fake green wall does not obstruct any switch-boards or important access points



04

If you are renting you may consider using adhesive hooks instead.

05


Avoid installing artificial green walls near sources of open flames. While our artificial green walls are made from fire-tested materials, this step helps prevent damage



White Flowering Artificial Boxwood Wall 40" x 40" 11SQ FT UV Resistant



Luxury Snowy White Artificial Vertical Garden 40" x 40" 11SQ FT UV Resistant

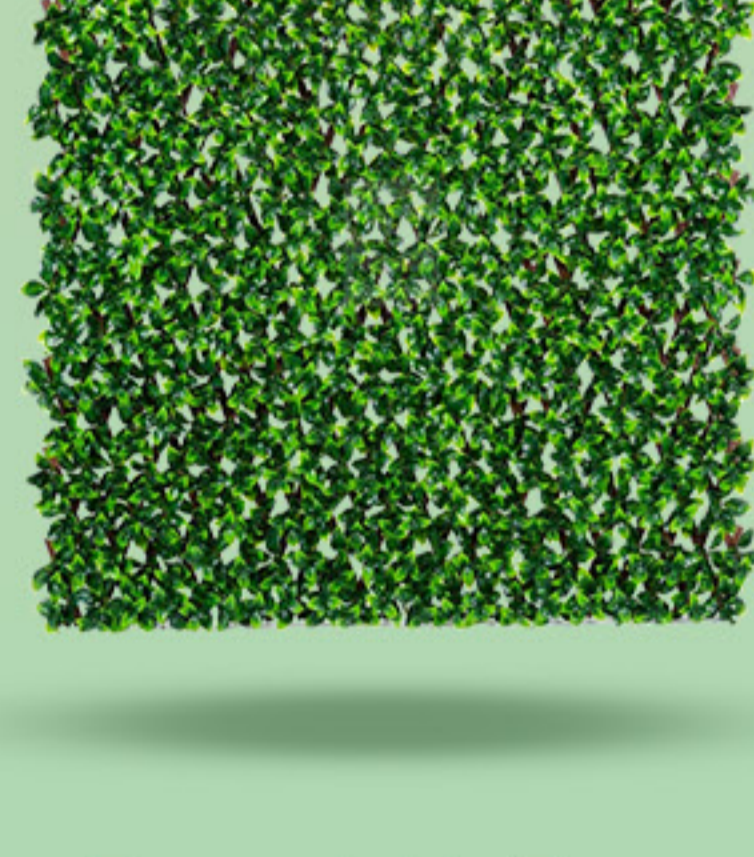

Expandable Faux Green Ligustrum Ficus Trellis Privacy Fence



INSTALL YOUR FIRST PANEL

HOLD UP YOUR GREEN WALL PANEL AND ATTACH THE PANEL STARTING IN THE TOP CORNER AND PROCEED TO ADD A FIXING EVERY 10"-15", DEPENDING ON THE SURFACE YOU WILL NEED TO ATTACH SLIGHTLY DIFFERENTLY.

01

Timer, Plaster, MDF or Plastic Fences/Walls Simply staple the panels to the wall/fence (gripping the backing mesh to the wall or fence)



02

Brick, Concrete, Masonry or Stone Fences / Walls



- Drill your hole adjacent to the backing mesh.
- Place the plug into the wall whilst holding the vertical garden panel against the wall
- Hammer or insert the wall fixing whilst ensuring the head of the fixing grips the panel against the wall


03

Mesh, Tubular or Railing Fences / Walls

- Push a cable tie through the vertical garden panel and loop it back around through the head of the cable tie and pull tight.
- Cut off the excess end of the cable tie.



Luxury Snowy White Artificial Vertical Garden 40" x 40" 11SQ FT UV Resistant

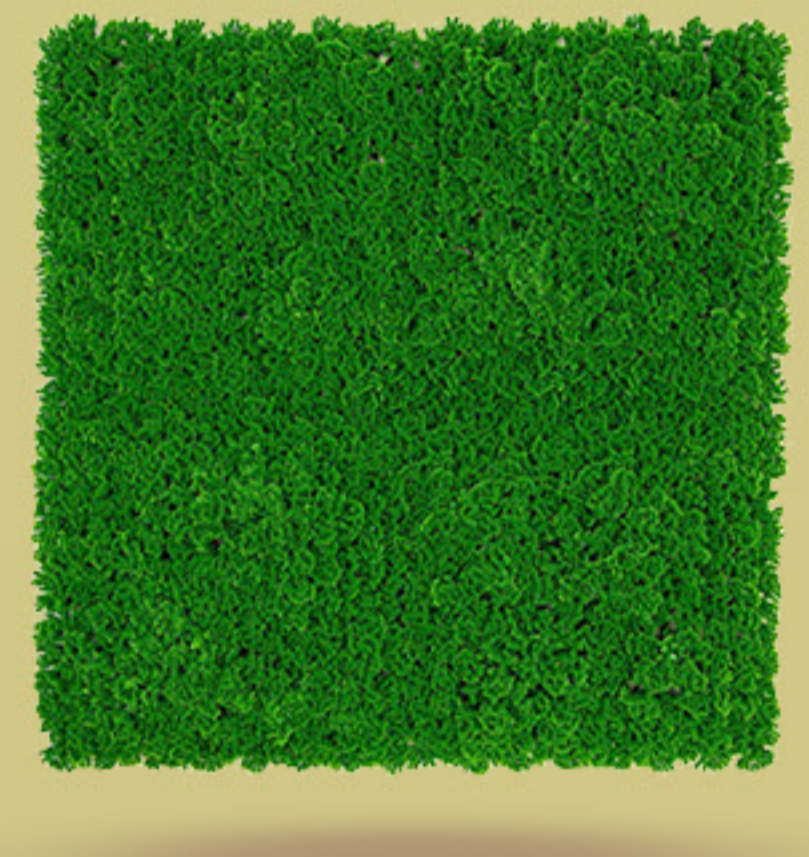

Premium Commercial Grade Faux Evergreen Moss Mat 33 SQ FT UV Resistant




Luxury Country Fern Artificial Vertical Garden 40" x 40" 11SQ FT UV Resistant



FIRMLY SECURE THE PANEL

01

Proceed to attach a fixing every 10-15 inches per vertical garden panel (around 12 per panel). Less can be used in areas not subject to strong winds.

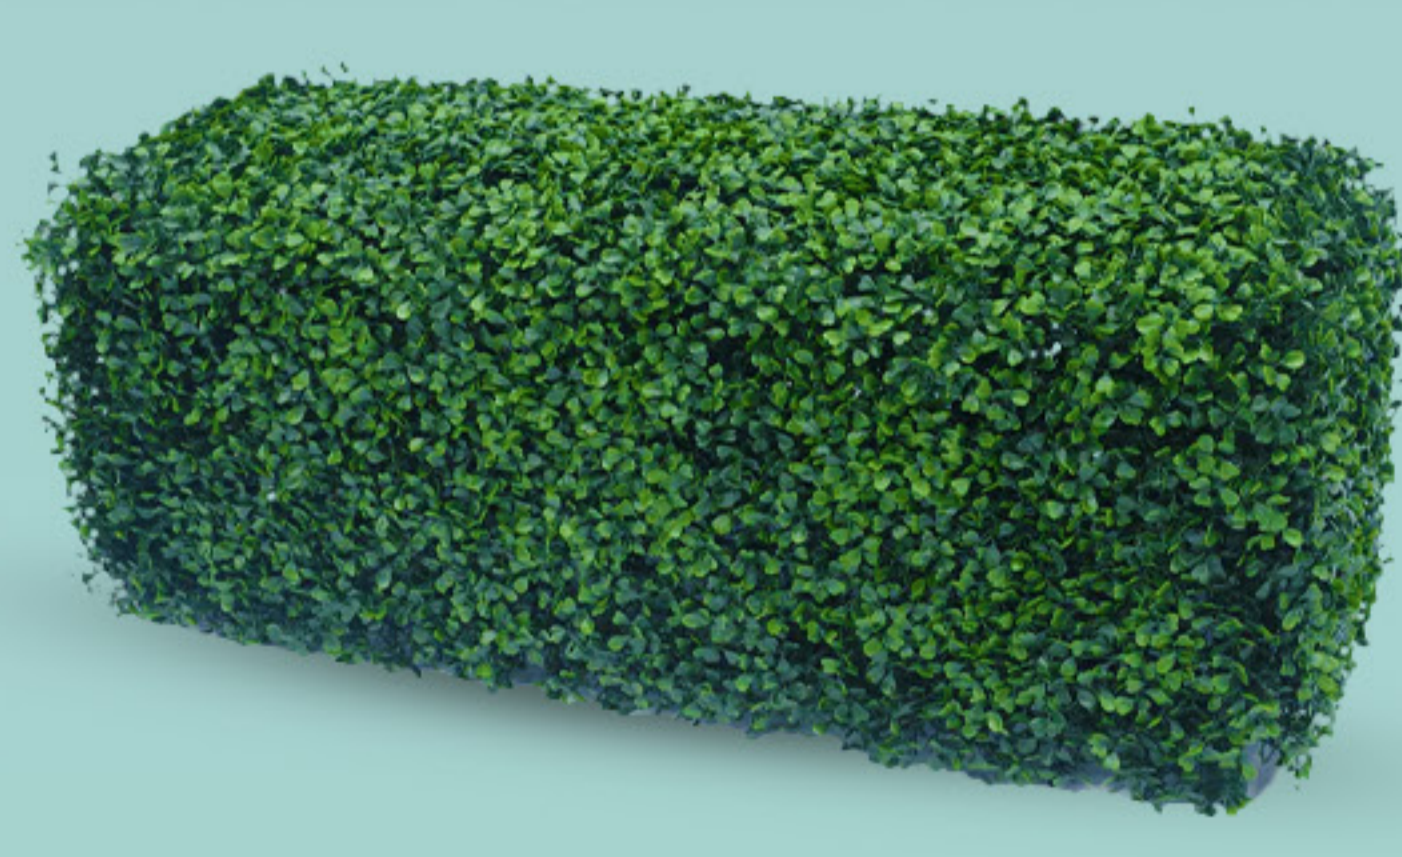

Dark Artificial Boxwood Hedge 40"L x 10"H UV Resistant



SECURE THE SECOND PANEL



Using the holes and lugs along the panel you should now join the second panel (and subsequent panels) to the first panel

01



CONTINUE THE SAME PROCESS

01

Follow the above steps to secure remaining panels. You may need to cut the last vertical garden panel to accommodate, and to ensure the wall is completely filled. If your wall is smaller than a full panel you can simply cut the excess off the vertical garden panel using scissors by cutting along the backing mesh.



DESIGNER PLANTS®
ULTRA REALISTIC LIVING WALLS

SALES@DESIGNERPLANTS.COM

+1786 723 3309

DESIGNERPLANTS.COM